

INSTALLATION INSTRUCTIONS



The **Santa-Fe Ultra V205** Dehumidifier is a ventilating dehumidifier that integrates into the heating and cooling system to provide the ultimate in comfort, health and property protection through:

- + Dehumidification
- + Optional Outdoor Air Ventilation
- + Air Filtration

Serial Number _____

Install Date _____

Sold By _____



Patent: rpc-pat.com

TABLE OF CONTENTS



1. Safety Instructions	2	9.8 External Control Mode	20
2. Assembly & Registrations	3	9.9 Terminal Block Layout	20
3. Dehumidifier Set Up	4	9.10 Float Switch Cutout.....	20
3.1 Location Considerations.....	4	9.11 Fan Control	20
3.2 Unventilated Areas	4	9.12 DEHU Control.....	20
4. Attaching Duct Collars	5	9.13 External Controller Options.....	21
5. Electrical Requirements	6	9.14 On Board Power	21
5.1 Wiring Schematic	6	10. Air Filtration	22
5.2 Hardwiring	7	10.1 MERV Rating Chart.....	23
6. Drain Installation	10	11. Service	24
7. Ducting to HVAC Systems	11	11.1 Warranty	24
7.1 Dehumidifier Location.....	11	11.2 Technical Description	24
7.2 Ducting Considerations	12	11.3 Service Personnel	24
7.3 Recommended HVAC System Installations..	12	11.4 Checks to Electrical Devices.....	25
7.4 Alternative HVAC System Installations.....	13	11.5 Sealed Electrical Components Shall Be Replaced	25
8. Outdoor Air Ventilation	16	11.6 Intrinsically Safe Components Must Be Replaced	25
8.1 Determine Ventilation Requirements	17	11.7 Detection of Flammable Refrigerants	26
9. Controls	18	11.8 Refrigerant Removal and Evacuation.....	26
9.1 Set the Relative Humidity Setpoint	18	11.9 Charging Procedures	26
9.2 Set the Fan Mode	18	11.10 Decommissioning	27
9.3 Air Sampling	19	11.11 Labelling Decommission Machines.....	27
9.4 Dew Point Cutout	19	11.12 Refrigerant Recovery	27
9.5 Temperature Cutout	19	11.13 Error Codes	28
9.6 Defrost Protection	19	12. Warranty	29
9.7 Filter Reset.....	19		

1. SAFETY PRECAUTIONS



WARNING!

THIS SYMBOL MEANS IMPORTANT INSTRUCTIONS. FAILURE TO HEED THEM CAN RESULT IN SERIOUS INJURY OR DEATH.

CAUTION!

THIS SYMBOL MEANS IMPORTANT INSTRUCTIONS. FAILURE TO HEED THEM CAN RESULT IN INJURY OR MATERIAL PROPERTY DAMAGE.

Read the installation, operation and maintenance instructions carefully before installing and operating this device. Proper adherence to these instructions is essential to obtain maximum benefit from the Santa-Fe Whole House Ventilating Dehumidifier.

WARNING!

120 VOLTS MAY CAUSE SERIOUS INJURY FROM ELECTRIC SHOCK. DISCONNECT ELECTRICAL POWER BEFORE STARTING INSTALLATION OR SERVICING, AND LEAVE POWER DISCONNECTED UNTIL INSTALLATION OR SERVICE IS COMPLETED.

CAUTION!

- Always use caution and wear CUT RESISTANT gloves when handling sheet metal.
- Improper installation may cause property damage or injury. Installation, service, and maintenance must be performed by a qualified service technician.
- The dehumidifier is heavy. Handle with care and follow installation instructions.
- Never operate a unit with a damaged power cord. If the power cord is damaged, it must be replaced by the manufacturer, its service agent, or a similarly qualified person in order to avoid a hazard.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience or knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
- The device is designed to be installed indoors in a space that is protected from rain and flooding.
- Install the unit with enough space to access all sides for maintenance and service. The entire shell needs to be removed in order to do repairs.
- Avoid directing the discharge air at people. The dehumidifier should be used in the upright position.
- If used near a water source; be certain there is no chance the unit could fall into the water or get splashed and that it is plugged into a dedicated circuit and Ground Fault Circuit Interrupter (GFCI) protected outlet.
- DO NOT use the dehumidifier as a bench or table.
- Do not place the dehumidifier directly on structural building members without vibration absorbers or unwanted noise may result. Place the Santa-Fe dehumidifier on supports to raise the base of the unit.
- A drain pan with a float switch must be placed under the dehumidifier if installed above a living area or above an area where water leakage could cause damage.
- Make all electrical connections in accordance with the current edition of the NEC ANSI/NFPA 70 and any national and local codes or ordinances that may apply.
- Maintain a minimum 1ft. (.3m) clearance to avoid obstructing the air return and supply.
- Not intended for use at altitudes over 6500 ft (2000M).
- The minimum floor area of the storage room shall be 28 m² (square meters).
- Make all electrical connections in accordance with the current edition of the NEC ANSI/NFPA 70 and any national and local codes or ordinances that may apply.



**REFRIGERANT
SAFETY GROUP
A2L**

WARNING!

DO NOT USE MEANS TO ACCELERATE THE DEFROSTING PROCESS OR TO CLEAN, OTHER THAN THOSE RECOMMENDED BY THE MANUFACTURER. THE APPLIANCE SHALL BE STORED IN A ROOM WITHOUT CONTINUOUSLY OPERATING IGNITION SOURCES (FOR EXAMPLE: OPEN FLAMES, AN OPERATING GAS APPLIANCE, OR AN OPERATING ELECTRIC HEATER. DO NOT PIERCE OR BURN. BE AWARE THAT REFRIGERANTS MAY NOT CONTAIN AN ODOR.

2. ASSEMBLY & REGISTRATIONS



Assembly

 
Step 1. Unpack Box.

Step 2. Check that you have all parts:


a. Dehumidifier (1)




b. Leveling feet (4)



c. Hardwire Kit

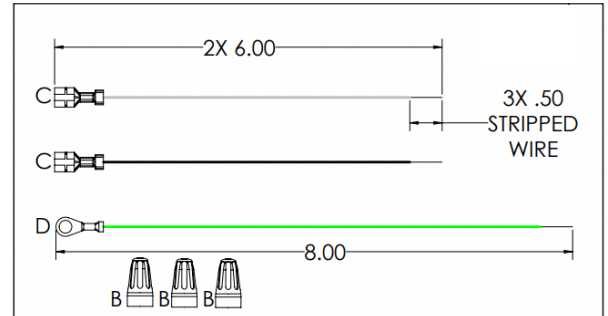


d. MERV-13 Filter (1)

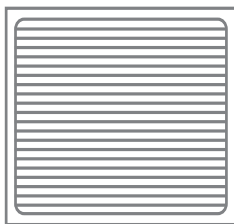


PN 4042787

e. 10" Round Duct Collars (2)

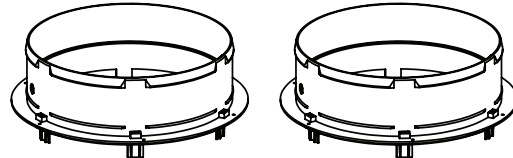


f. 8" Round Duct Collar (1)

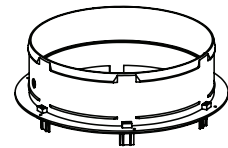

Step 3. Register warranty at santa-fe-products.com

Step 4. Read all remaining steps and warnings before continuing.

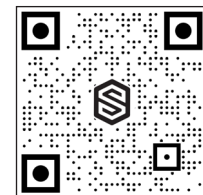

Scan to Register Product



THE SANTA-FE ULTRA V205 CONFORMS TO UNIFIED STANDARD UL 60335-2-40 AND CSA STANDARD C22.2.60335-2-40.

Brand Name	Individual Model Number	Basic Model Number	Rating Conditions	Integrated Energy Factor (L/kWh)	Capacity (Pint/Day)
Santa-Fe Ultra V205	4046180	205.1-W	73F/60%	2.97	167

3. DEHUMIDIFIER SET UP




3.1 Location Considerations

The dehumidifier can be installed in a variety of locations to meet the owner's needs. In all cases, keep the following cautions in mind:

- Allow sufficient clearance to handle the unit's overall dimensions, filter removal, proper airflow, electrical service access and the necessary return and supply ductwork to the unit.
- Allow for proper drainage and routing of needed drain pipes.
- Locate the dehumidifier in an area where the unit's 10 ft. cord can easily reach electrical outlet.
- Locate the dehumidifier in an area where field wiring the control (low voltage) to the unit will be possible.
- A back draft damper is required in the supply duct of the dehumidifier, especially when connecting to the supply ducting system. The backdraft damper prevents supply air from counter flowing through the dehumidifier when it is not operating. The dehumidifier's location should be chosen to allow installation of this accessory if necessary.
- Fasten the dehumidifier on supports that raise the base of the unit at least 6.75" above the secondary drain pan so a p-trap can be installed.
- The dehumidifier may be suspended with the hang kit or a suitable alternative from structural members, ensuring the assembly supports the dehumidifier's base in its entirety. Do not hang from sides or ends. If hanging machine in air, the leveling feet do not need to be installed.
- The minimum floor area of the room shall be 6.6 square meters.
- Keep any required ventilation openings clear of obstruction.
- Ducts connected to the dehumidifier shall not contain a POTENTIAL IGNITION SOURCE.
- Supply and return air shall be directly ducted to the space. Open areas such as false ceilings shall not be used as a return air duct.
- This unit is designed to be fixed in place and should not be seasonally relocated.

3.2 Unventilated Areas

- Unventilated areas where the dehumidifier is installed or stored need to be so constructed that should any refrigerant leak, it will not stagnate so as to create a fire or explosion hazard.
- The dehumidifier shall not be stored or ducted into one or multiple rooms with continuously operating open flames (for example an operating gas appliance) or other POTENTIAL IGNITION SOURCES (for example an operating electric heater, hot surfaces). A flame-producing device may be installed in the same space if the device is provided with an effective flame arrest.

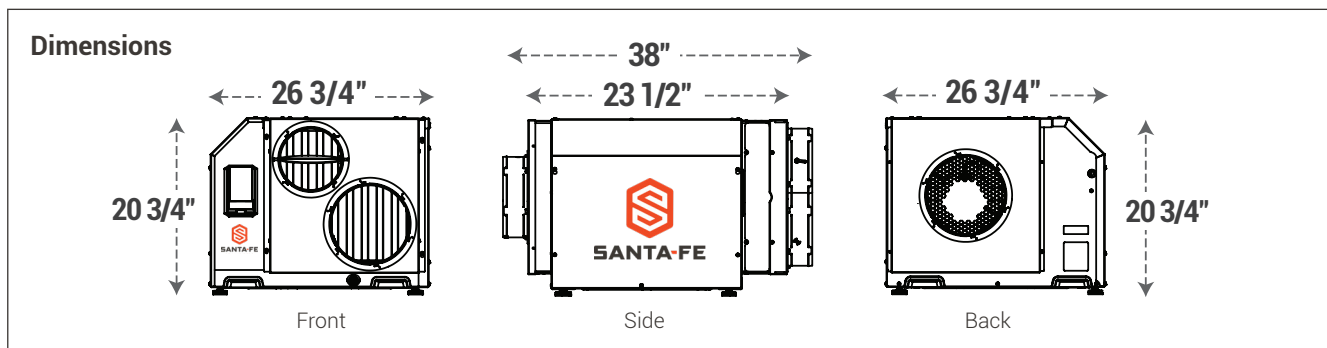

4. ATTACHING DUCT COLLARS



1. Outdoor Air Ventilation Duct


Outdoor air ventilation is optional. If setting up the unit to provide outdoor air ventilation, see pages 16-17.

2. Return Air Inlet

A 10" diameter duct collar attaches to the unit.

3. Supply Air Outlet

A 10" diameter duct collar attaches to the unit.

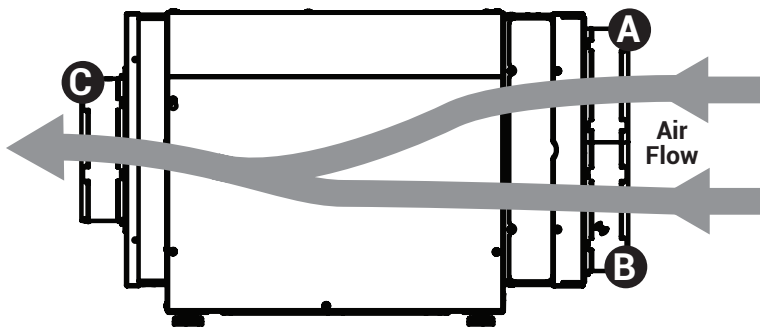

SIDE VIEW

- A** 8" Optional Outdoor Air Intake
- B** 10" Return Air Inlet
- C** 10" Supply Air Outlet

5. ELECTRICAL REQUIREMENTS



The Ultra V205 dehumidifier plugs into NEMA rated receptacles. Ensure all local electrical codes are followed.

Install an RH Controller in a central area of the structure where it will sense the relative humidity of the structure accurately. Do not install the RH Controller where it may not accurately sense the relative humidity such as near HVAC supply registers, near exterior doors, or near a pool or spa. The installer must supply the wiring between the Ultra V205 dehumidifier and the RH Controller. Be sure to safely route the control wiring to prevent damage during installation. Be careful not to cross the wires when connecting the Ultra V205 dehumidifier and the remote RH Controller.


The remote controls of the Ultra V205 dehumidifier are powered by a low voltage circuit (24V AC) and must NEVER contact or be connected to a high voltage circuit. The control terminals and remote control are labeled and numbered to prevent confusion. Be sure to consult the electrical schematic in this manual or inside the access panel of the Ultra V205 dehumidifier before making the control connections.

⚠ CAUTION! ALWAYS DISCONNECT THE ULTRA V205 FROM A POWER SOURCE WHEN WORKING WITH THE HIGH VOLTAGE CONTROL WIRES.

Error Codes

Display Code	Name	Critical
E1	RH Sensor Error	No
E2	Low Dew Point	No
E3	Low Refrigerant	Yes
E4	Float	Yes
E5	Evaporator Sensor Error	No
E6	Temperature Too High	Yes
E7	Temperature Too Low	Yes
E8	Communication Error	No
E9	High Pressure Cut Out	Yes

5.1 Wiring Diagram

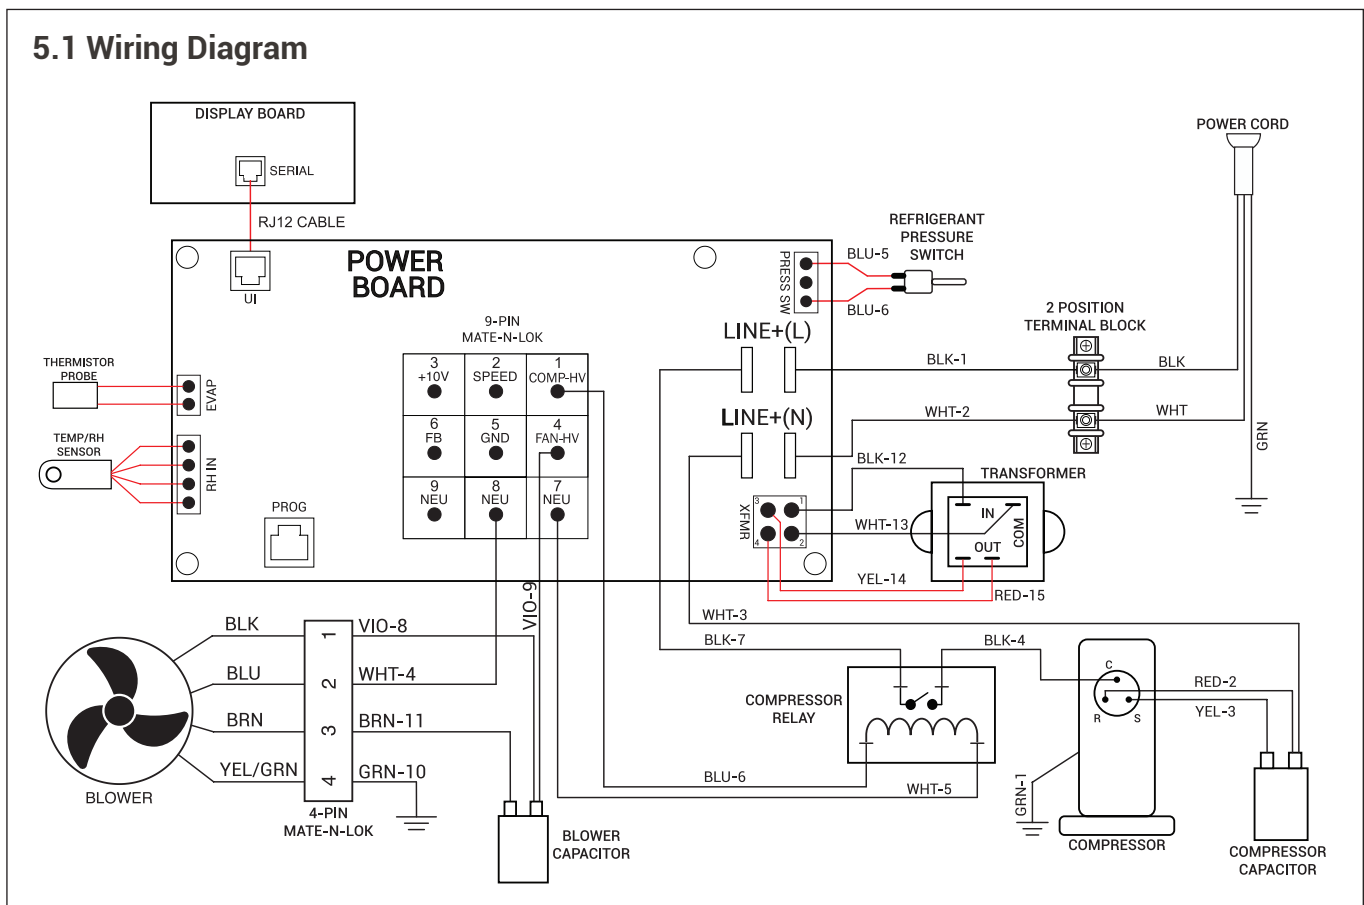

5. ELECTRICAL REQUIREMENTS



5.2 Hardwire Instructions

⚠ WARNING! SERVICING THE ULTRA V205 DEHUMIDIFIER, WITH ITS HIGH PRESSURE REFRIGERANT SYSTEM AND HIGH VOLTAGE CIRCUITRY PRESENTS A HEALTH HAZARD WHICH COULD RESULT IN DEATH, SERIOUS BODILY INJURY, AND/OR PROPERTY DAMAGE. ONLY QUALIFIED SERVICE PEOPLE SHOULD SERVICE THIS UNIT.

Tools Required:


- T25 Torx Driver
- 11/32" Driver

Following all local and national electrical codes and standards, route electrical service to the location that the dehumidifier will be installed. A field-installed disconnect is required when hard-wiring this dehumidifier.

Step 1:


Remove 7 screws on access panel using T25 Torx driver.

Remove panel.

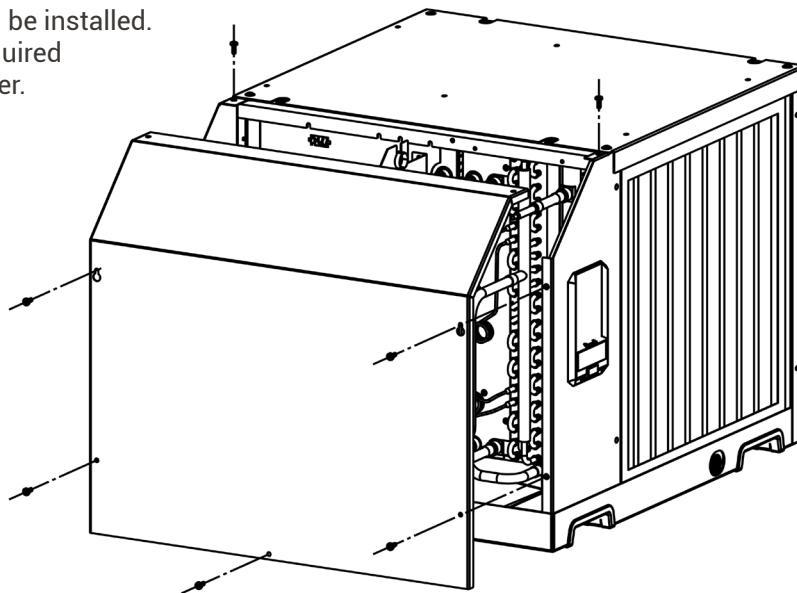

Step 2:

Locate the electrical box.

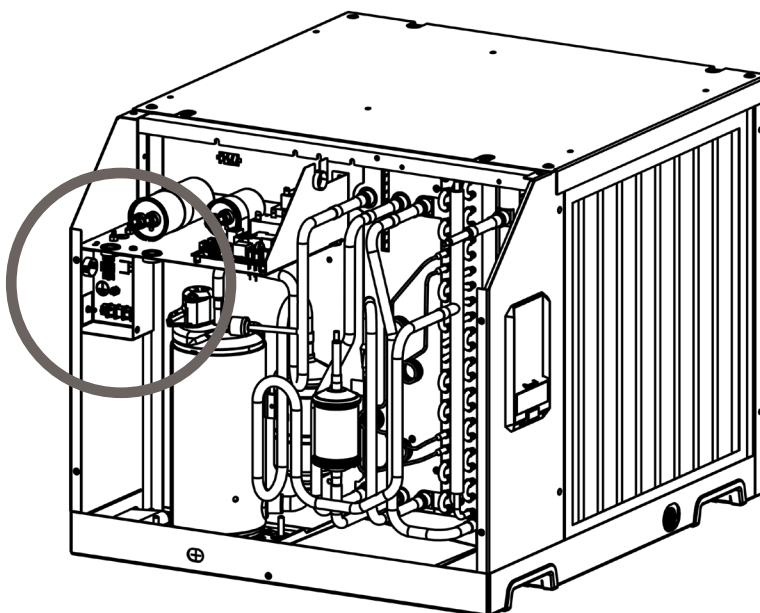


5. ELECTRICAL REQUIREMENTS




Step 3:

- Disconnect POWER CORD BLACK wire from terminal (A).
- Disconnect POWER CORD WHITE wire from terminal (B).

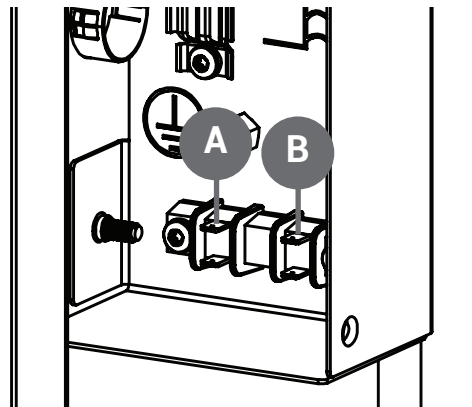


Step 4:

Use 11/32" driver to remove nut from ground stud and disconnect POWER CORD GREEN wire from ground stud.

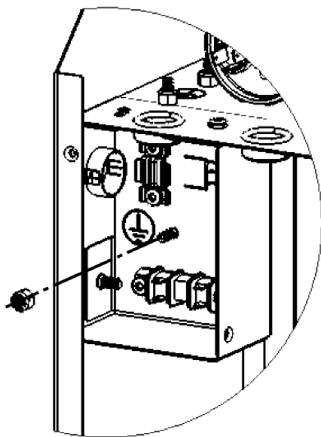


Step 5:

Remove the 2 screws holding the cord retention bracket using T25 Torx driver and remove retention bracket.

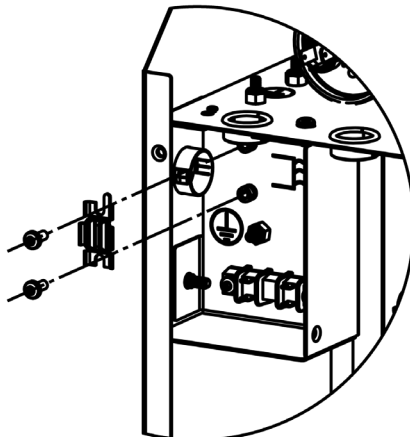

Step 6:

Remove power cord and black bushing.

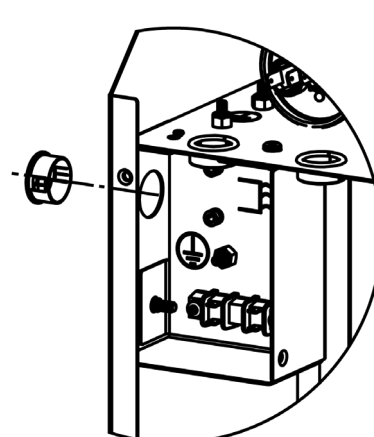


Step 7:

Route incoming power service wires through 7/8" hole and secure using clamps intended for the conduit or cable.

5. ELECTRICAL REQUIREMENTS




Hardwire kit with jumper wires can be found in the packed parts kit.

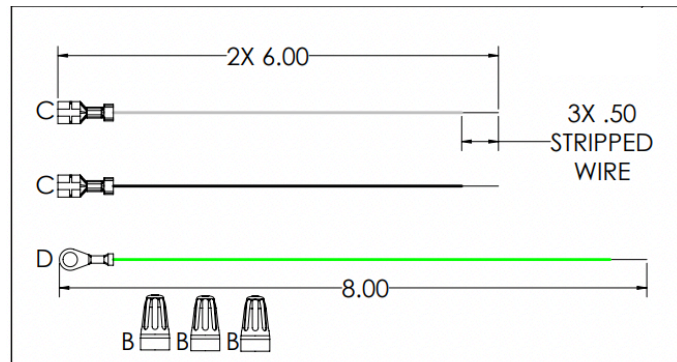

Step 9:

- Connect BLACK and WHITE jumper wires to terminal block as shown (C and D).
- Place GREEN jumper wire ring terminal on ground stud (E) and use 11/32" driver to secure nut to stud.
- Attach incoming service LINE 1 wire to BLACK jumper wire with the provided wirenut.
- Attach incoming service LINE 2 wire to WHITE jumper wire with the provided wirenut.
- Attach incoming service GROUND wire to GREEN jumper wire with the provided wirenut.

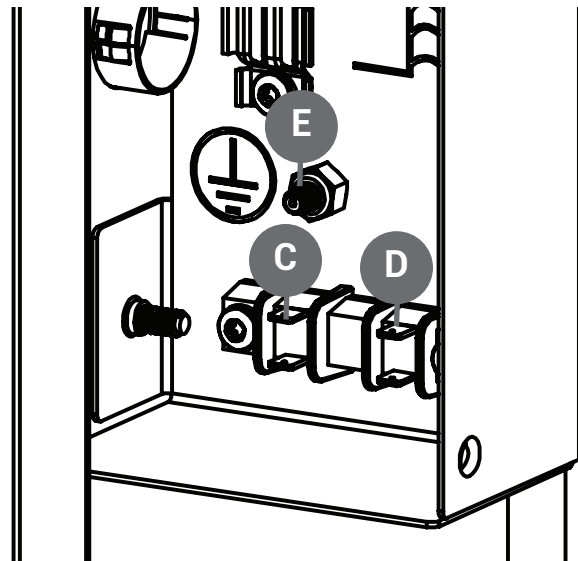


Step 10:

Replace access panel using T25 Torx driver to secure 7 screws.

6. DRAIN INSTALLATION



The Santa-Fe Ultra V205 produces condensate. If above a finished area, use a secondary drain pan with a float switch, elevating the unit 6.75" for a p-trap. Attach a 3/4" male NPT adapter and 3/4" PVC drain pipe, pitched 1" per 10', to a drain. An optional condensate pump kit activates via float switch if lift is needed; its safety float switch, wired to the dehumidifier's common lead by a qualified electrician, prevents overflow. Use a drain trap to stop backward airflow and leaks, ensuring the PVC drain pitches downward.

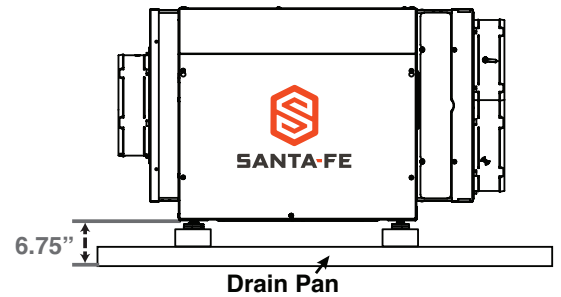

⚠ CAUTION! FOR PROPER DRAINAGE, THE UNIT MUST BE MOUNTED SO THE DRAIN OUTLET IS AT LEAST 6.75" ABOVE THE FLOOR DRAIN, AND MUST BE FULLY SUPPORTED UNDER THE BASE.

Condensate Water Removal

Condensate drains by gravity via the drain port. Use 3/4" male NPT PVC pipe. An optional condensate pump kit may be installed if a lift is required to dispose of the condensate.

Follow Diagram:

H = 4"
J = 2"
L = 6.75"

Vent:


- Place vent after the trap.
- Vent should be open.
- Height of vent should be higher than drain outlet.

Cap:

- A clean out can be placed before trap but must be sealed with :

Drain Line:

- Drain line should go in a downward slope to the drain.
- 1/4" drop per foot.

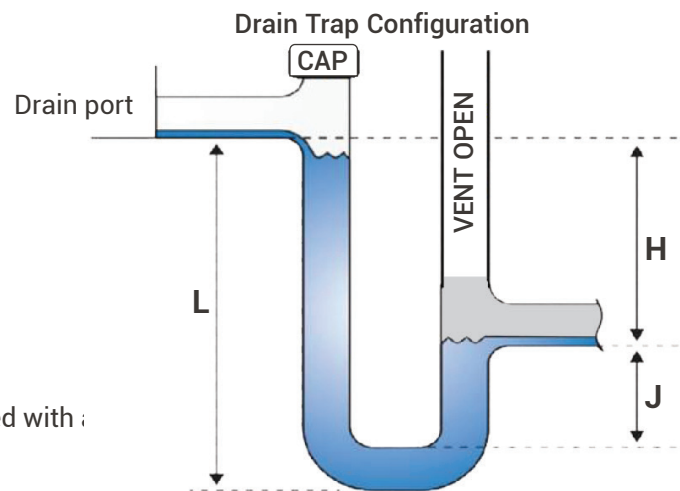



7.1 Dehumidifier Location



Choose whether to place dehumidifier on the floor or to hang the dehumidifier.

- If hanging the dehumidifier, see Diagram A below.
- If placing the dehumidifier on the floor, continue with the following instructions in the Ducting To HVAC Systems section.

DIAGRAM A: Hanging the Dehumidifier

Parts Needed:

- 4 pieces 3/8" threaded rod (not included)
- 4 - 3/8" threaded jam nuts (not included)

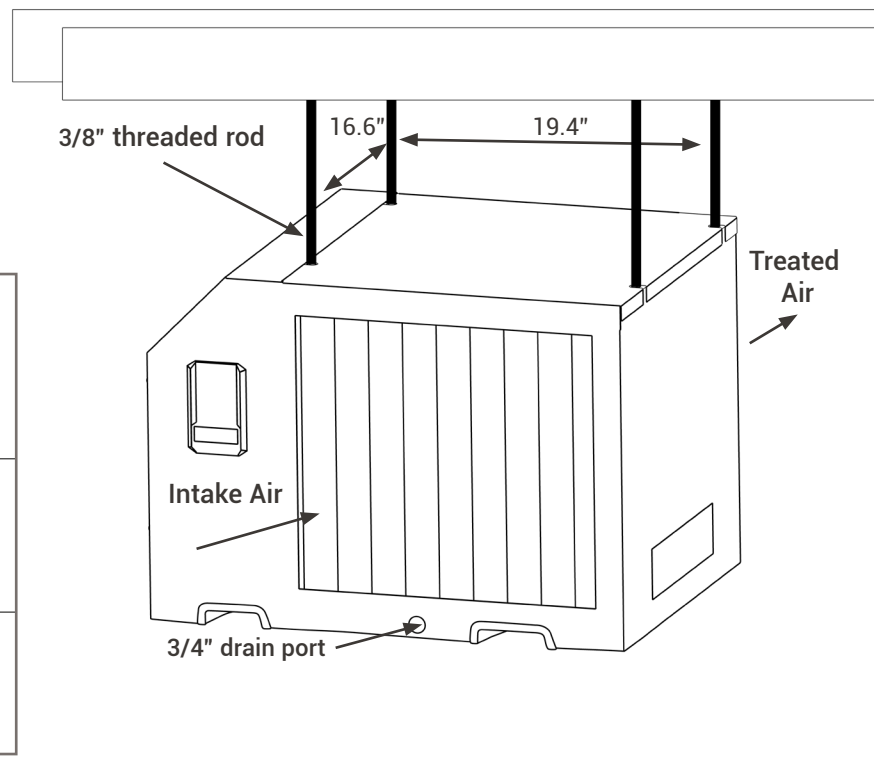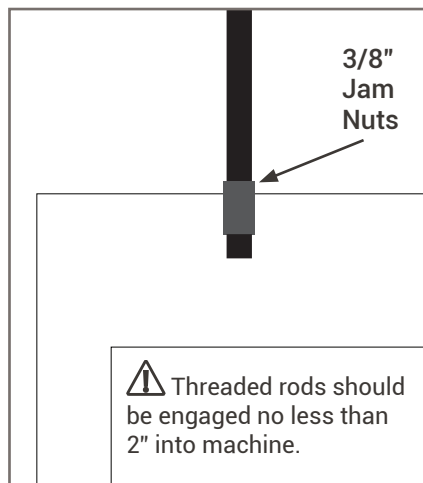

7. DUCTING TO HVAC SYSTEMS



⚠ CAUTION!

DO NOT CONNECT WITH A STATIC PRESSURE GREATER THAN OR EQUAL TO 0.5" WATER COLUMN. CONTACT TECHNICAL SUPPORT AT (800) 533-7533 FOR ADDITIONAL DETAILS.

⚠ CAUTION!

ALLOW FOR ENOUGH SPACING TO PROPERLY ROUTE THE RETURN AND SUPPLY CONNECTION.

7.2 Ducting Considerations:


- All flexible ducting connected to the Santa-Fe Ultra V205 should be UL listed.
- A short piece of flexible ducting on all Santa-Fe Ultra V205 duct connections is recommended to reduce noise and vibration transmitted to rigid ductwork in the structure.
- Use a minimum 10" diameter round or equivalent rectangular duct for total duct lengths of up to 25'. Use a minimum 12" diameter or equivalent for longer lengths.
- Grills or diffusers on the duct ends must not excessively restrict airflow.
- A length of 8" or more of insulated flex duct or any other vibration isolating material on the outlet of the Santa-Fe Ultra V205 will reduce air noise from the blower.
- Effective dehumidification may require that ducting be branched to isolated, stagnant air flow areas. When ducting to two or three areas, use 8" or larger diameter branch ducting. When ducting to four or more areas, use 6" or larger diameter branch ducting. Provisions must be made to provide airflow from supply locations to the central return location. Proper air distribution is important to ensure even humidity control and heat distribution throughout the structure.
- DO NOT locate the return in a bathroom or a kitchen.

7.3 Recommended HVAC System Installations

a. Attic

The recommended installation draws air from a central location through a dedicated return to the dehumidifier and ducts the supply of the dehumidifier to the air supply of the HVAC system. Utilize the optional outdoor air ventilation duct to provide outdoor air.

- Install a dedicated 10" air return for the Santa-Fe Ultra V205 from a central area of the structure.
- Duct the supply of the Santa-Fe Ultra V205 to the supply of the HVAC system with a backdraft damper.
- If the existing system has multiple returns, instead of installing a dedicated return to the Santa-Fe Ultra V205, it is possible to select one to disconnect from the existing HVAC system and use it for the dedicated Santa-Fe Ultra V205 return. Select a return from a central location in the house that is always open to the rest of the structure. DO NOT use a return from a room where doors are kept closed.
- DO NOT locate return in a bathroom or kitchen.
- Control should be located remotely from the dehumidifier and placed in a central location.

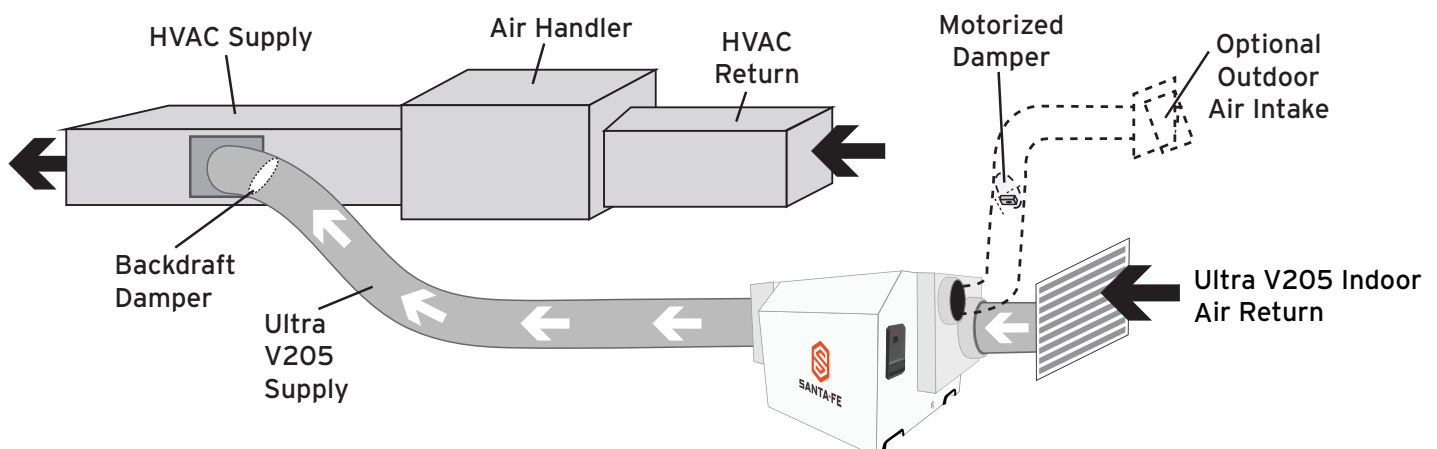


7. DUCTING TO HVAC SYSTEMS



b. Installation to Designated Areas in the Home using HVAC System

Install a separate 10" return for the Ultra V205 in a central area of the structure. Duct the supply of the dehumidifier to the air supply of the HVAC system with a backdraft damper.

Optional: Duct the supply of the Ultra V205 to a 10" x 10" x 10" tee/damper with a gravity draft damper, adjusted to 20% open to the basement. **CAUTION:** Air takes the path of least resistance. If the upper levels of the living space are not receiving the appropriate amount of dry air, this damper may need to be adjusted. When the dehumidifier is not running, there is a chance that air from the basement or crawlspace will make its way back through the gravity damper and into the living space.

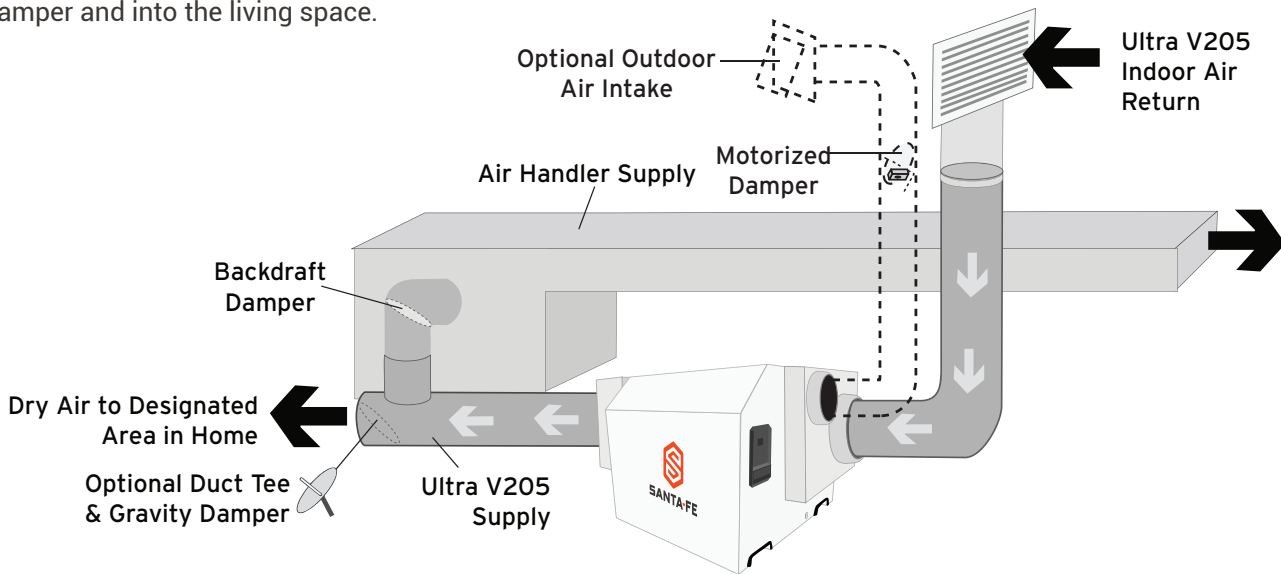

7.4 Alternative HVAC System Installations


If the Recommended Dedicated Ultra Series Return to HVAC Supply Installation is not possible, there are several alternative installation options available.

- DO NOT locate return in a bathroom or kitchen.
- Control should be located remotely from the dehumidifier and placed in a central location.
- For basement and crawl space installations, an optional tee can be installed on the Ultra V205 Supply.

a. HVAC Return to HVAC Supply

Check damper should be in place between the Return and Supply connections of the dehumidifier.

If the Check Damper is not in place, the HVAC fan must be ON when the dehumidifier is in operation.

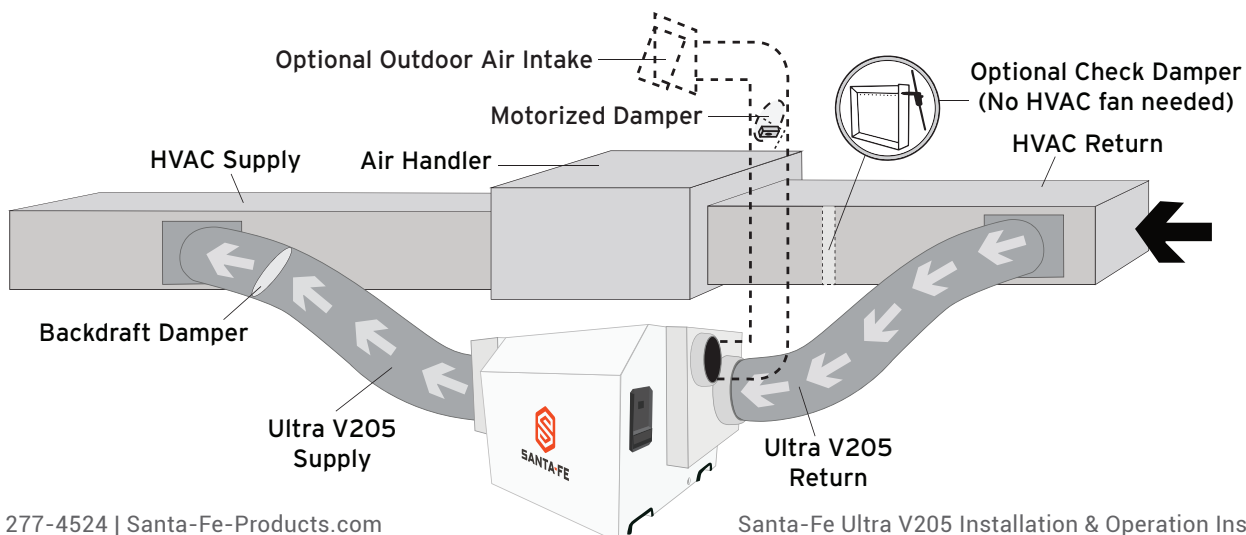

7. DUCTING TO HVAC SYSTEMS




b. HVAC Supply to HVAC Supply

CAUTION! TO AVOID THE DEHUMIDIFIER CYCLING IN AND OUT OF DEFROST, IT IS RECOMMENDED THAT THE LEAVING AIR TEMPERATURE OF THE A/C COIL IS NOT BELOW 55°F. ALSO, THIS INSTALL IS NOT RECOMMENDED FOR CLIMATES WHERE THE HEATING SYSTEM WILL RUN DURING THE SPRING AND FALL TIMES OF YEAR, AS THIS COULD DIMINISH THE WATER REMOVAL CAPABILITY OF THE DEHUMIDIFIER. IF THE CHECK DAMPER IS NOT USED, IT IS IMPORTANT TO HAVE THE HVAC SYSTEM FAN ON WHEN THE DEHUMIDIFIER IS ON TO PREVENT BACKFLOW OF AIR.

WARNING! DUE TO THE POTENTIAL OF CONDENSATION IT IS NOT RECOMMENDED TO USE THE OPTIONAL OUTDOOR AIR INTAKE WHEN INSTALLING THE DEHUMIDIFIER SUPPLY TO SUPPLY.


If the Check Damper is not in place, the HVAC fan must be ON when the dehumidifier is in operation.

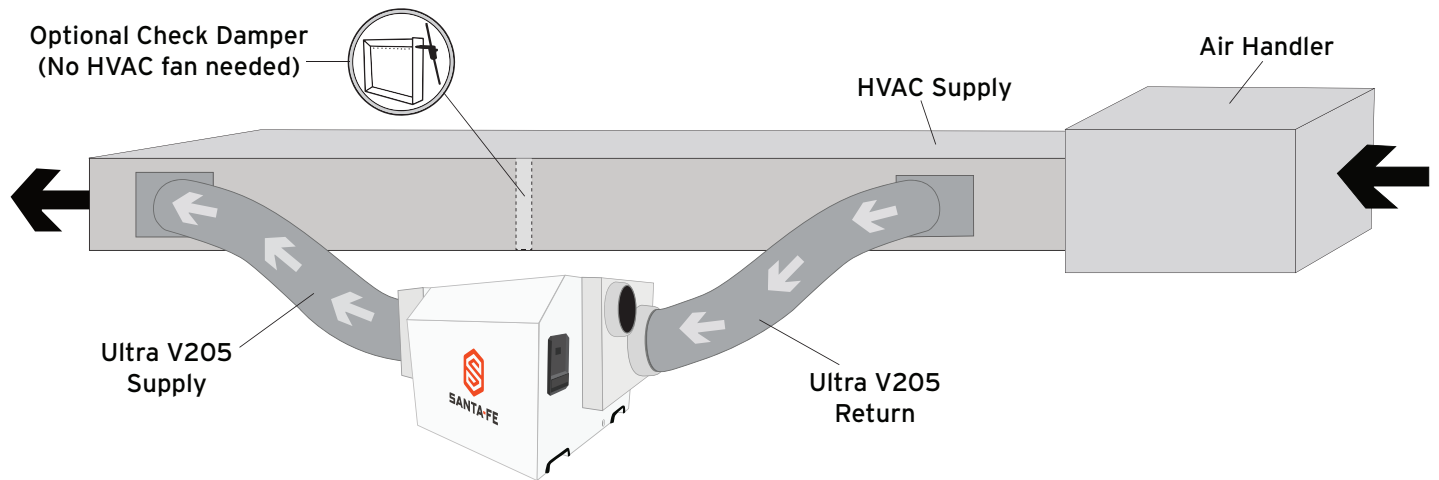

c. Dedicated Santa-Fe Return to HVAC Return

Create a separate return for the Ultra V205 Dehumidifier in a central area of the building.

Installing the supply air from the Ultra V205 Dehumidifier to the return of the HVAC system requires the HVAC fan to run when the Ultra V205 Dehumidifier is operating.

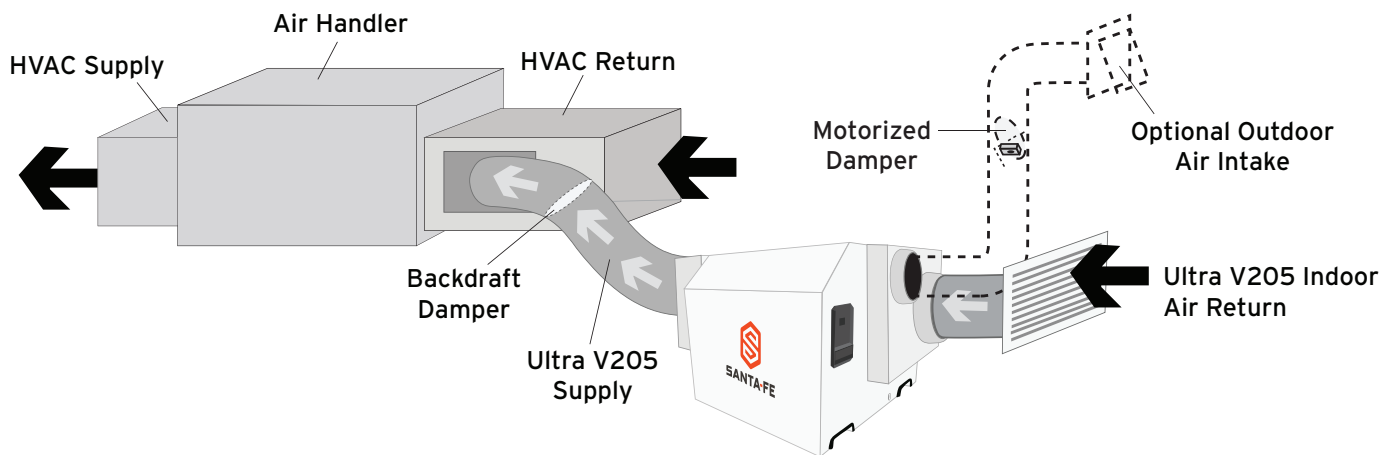

CAUTION! PLEASE NOTE: RETURN TO RETURN INSTALLS ARE TO BE CONSIDERED LAST RESORT OPTIONS AND ARE NOT RECOMMENDED. THE DEHUMIDIFIER WILL HEAT THE AC COOLING COILS WHICH DIMINISHES THE AMOUNT OF WATER THE AC SYSTEM WILL REMOVE WHEN OPERATING. IF THIS INSTALLATION IS CHOSEN, THE DEHUMIDIFIER MUST ACTIVATE THE HVAC BLOWER AND AC CALLS NEED TO LOCK OUT THE DEHUMIDIFIER FROM RUNNING. PLEASE CHECK YOUR LOCAL CODES PRIOR TO INSTALLING.

7. DUCTING TO HVAC SYSTEMS




⚠ CAUTION! PLEASE NOTE: RETURN TO RETURN INSTALLS ARE TO BE CONSIDERED LAST RESORT OPTIONS AND ARE NOT RECOMMENDED. THE DEHUMIDIFIER WILL HEAT THE AC COOLING COILS WHICH DIMINISHES THE AMOUNT OF WATER THE AC SYSTEM WILL REMOVE WHEN OPERATING. IF THIS INSTALLATION IS CHOSEN, THE DEHUMIDIFIER MUST ACTIVATE THE HVAC BLOWER AND AC CALLS NEED TO LOCK OUT THE DEHUMIDIFIER FROM RUNNING. PLEASE CHECK YOUR LOCAL CODES PRIOR TO INSTALLING.

e. HVAC Return To HVAC Return

Installing the supply air from the Ultra V205 Dehumidifier to the return of the HVAC system requires the HVAC fan to run when the Santa-Fe Dehumidifier is operating.

NOTE: If Check Damper is not in place, the HVAC fan must be ON when the dehumidifier is in operation.

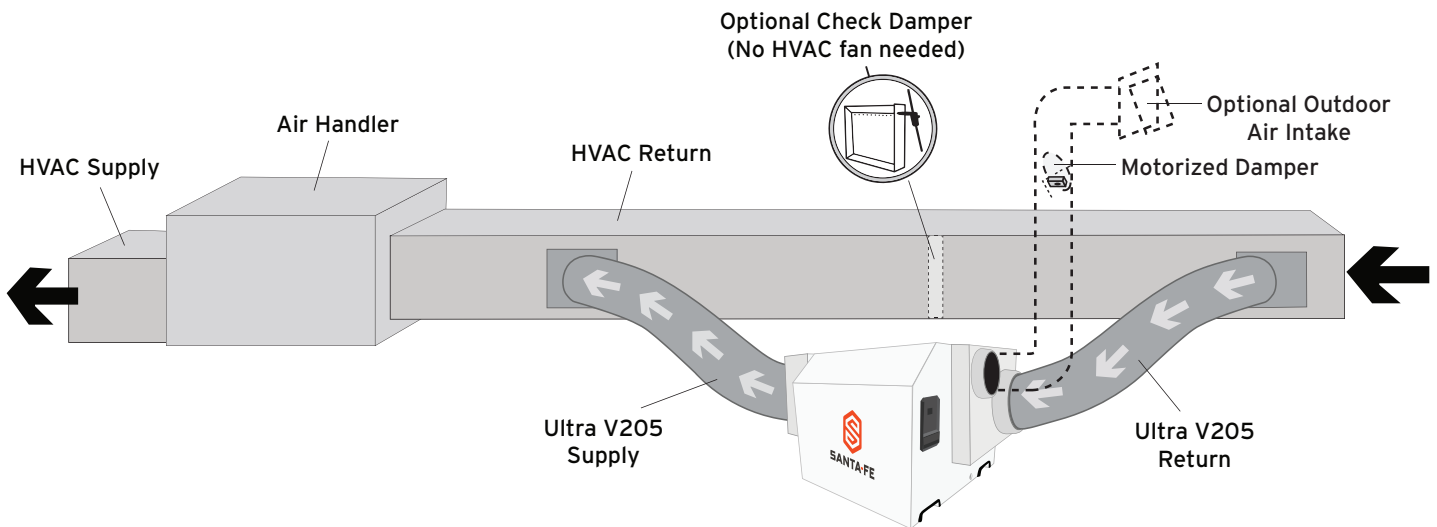

f. No Existing Ductwork Installation

When installing the Ultra V205 Dehumidifier in a structure that does not have a forced-air HVAC system, a single return for the dehumidifier should be installed in a central location.


Install an insulated duct from outside to the 8" collar of the Ultra Series Dehumidifier to provide outdoor air ventilation (optional).

The supply of the Ultra Series Dehumidifier should be ducted to the rooms in the home that have the ductless mini-split heads and as close to the heads as possible. Be sure to utilize multiple rooms to allow air inside the structure to properly circulate. Proper air distribution is important to ensure even humidity control and heat distribution throughout the structure. An 8" diameter duct is recommended for branches to bedrooms. A 10" diameter duct is recommended for branches to larger areas.

DO NOT locate return in a bathroom or kitchen.

DO NOT locate the supply in rooms where doors may be closed.

Control should be located remotely from the dehumidifier and placed in a central location.

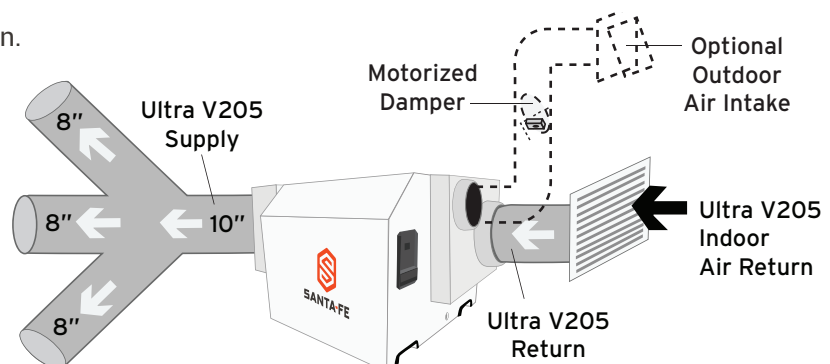

8. OUTDOOR AIR VENTILATION




Outdoor air ventilation is optional.

Outdoor air may be brought into the structure by connecting an insulated duct from outside the structure to the 8" inlet of the Santa-Fe Ultra V205. A ventilation control is needed to program the time and frequency that the unit introduces outside air. The time and frequency of ventilation should be based on the size and occupancy of the residence.

- The outdoor air ventilation duct should be connected to the 8" round collar on the front of the Santa-Fe Ultra V205.
- An insulated 8" diameter duct can provide up to 180 CFM of outside air.
- If a motorized damper is not being used, outdoor air is controlled by the manual damper in the 8" collar of the Santa-Fe Ultra V205.
- Performance of the Santa-Fe Ultra V205 can be impacted by inside and outside air conditions.
- When an 8" motorized damper is used, a digital control is required.
- It may be necessary to use 10" duct work if additional outdoor air is required.
- In cold climates or at times when the dew point is low, ventilation can be used to dehumidify the structure, making the Santa-Fe Ultra V205 capable of year-round drying.

8.1 Outdoor Air Ventilation With Dehumidifier Off and Fan Only Operation

Outside air mixes with return air prior to beginning the dehumidification process. Outside and inside temperature and relative humidity will impact the combined outlet air conditions.

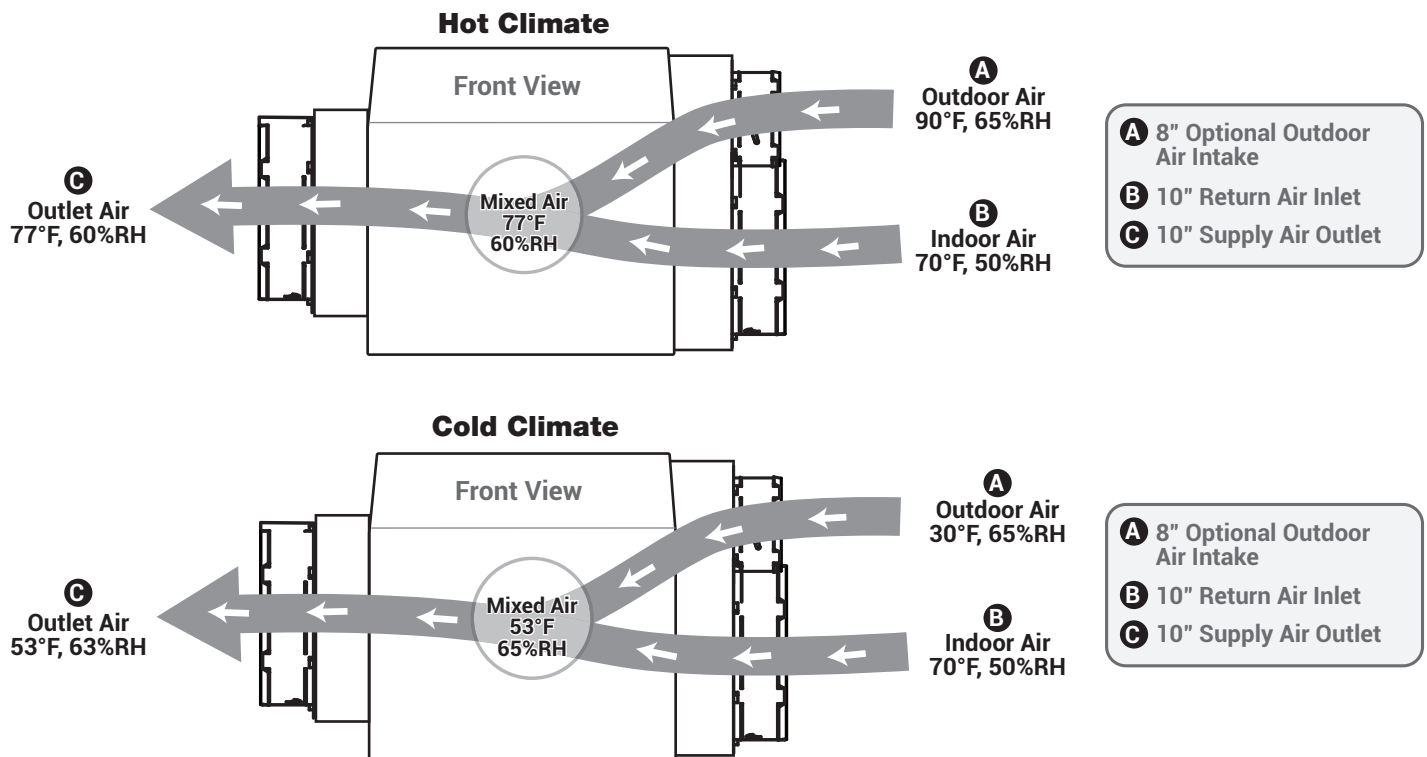

8. OUTDOOR AIR VENTILATION



8.2 Determine Ventilation Requirements

The MINIMUM ventilation requirement is calculated using ASHRAE 62.2-2016. Use one or both of the options below to determine your ventilation requirement. Follow all local and national building and safety codes.

Option 1: Calculating Airflow Requirement Using ASHRAE 62.2-2016 Airflow Equation

ASHRAE Airflow in CFM = [House Area in Sq.Ft. x 0.03] + [(Number of Bedrooms + 1) x 7.5]

NOTE: Use 'Number of Bedrooms + 1' or 'Number of Occupants', whichever is larger.

Example 1: Number of Bedrooms + 1

1800 square foot house with 3 bedrooms, 4 occupants = [1800 X 0.03] + [(3+1) X 7.5] = 84 CFM

Example 2: Number of Occupants

1800 square foot house with 3 bedrooms, 5 occupants = [1800 X 0.03] + [5 X 7.5] = 91.5 CFM

Record the required CFM _____

Option 2: Calculating Airflow Requirement Using Table 4.1 from ASHRAE 62.2-2019

Ventilation Air Requirements, CFM

Floor Area (ft ²)	Number of Bedrooms				
	1	2	3	4	5
<500	30	38	45	53	60
501-1000	45	56	60	68	75
1001-1500	60	68	75	83	90
1501-2000	75	83	90	98	105
2001-2500	90	98	105	113	120
2501-3000	105	113	120	128	135
3001-3500	120	128	135	143	150
3501-4000	135	143	150	158	165
4001-4500	150	158	165	173	180
4501-5000	165	173	180	188	195

Table 4.1 from ASHRAE 62.2-2019

Record the required CFM _____


9. CONTROLS



The Santa-Fe V205 dehumidifier can be controlled by its on board dehumidistat or with an external control using its low voltage terminal block.

Control Functions

- 1 Power button
- 2 Display
- 3 Up button
- 4 Down button
- 5 Defrost indicator
- 6 Filter indicator
- 7 Filter button
- 8 Dark Mode indicator
- 9 Dark Mode button
- 10 Terminal Control indicator
- 11 Terminal Control button
- 12 Fan indicator
- 13 Fan button
- 14 Terminal block

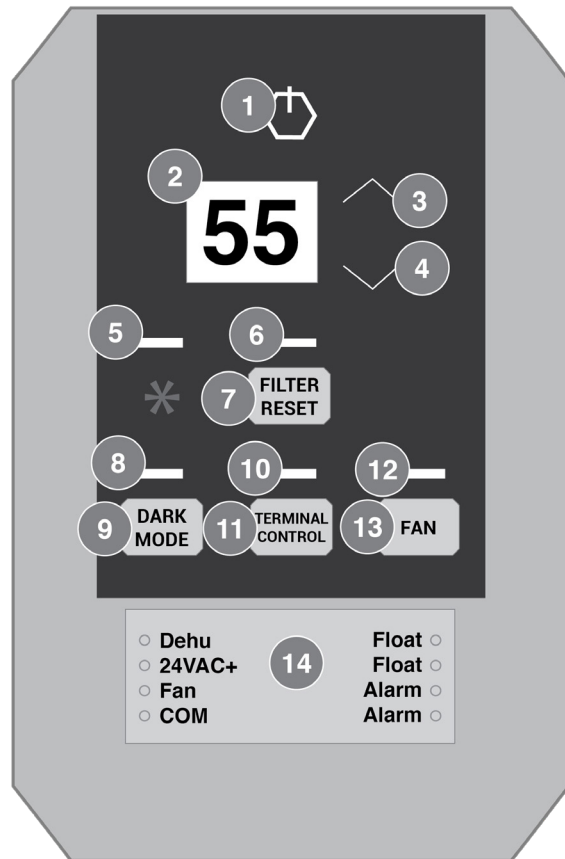

Terminal block pins shown. Removable cover will be reversed.

When the Unit is Off: Fan, Compressor, Display and display is off.

To Turn Unit On: Press the power button.

To Turn Unit Off: Press the Power Button.

When the Unit is On: Display is on and shows the setpoint. In the event of a power outage, the unit will resume operation with the same RH Setpoint and Fan Mode once power turns back on. The unit will NOT need to be manually turned on after power is established.

When the unit is in internal control mode terminal block will not accept a call for FAN or DEHU. To use the terminal block, see section 9.9.

9.1 Set the Relative Humidity Setpoint



1. Press the up or down arrow once, the 2-digit display will begin to blink.
2. Adjust to desired RH. Each push of the button will change the setpoint by 1% relative humidity.
3. After 6 seconds without a button being pushed the number showing will become the new setpoint.

Note: When the dehumidifier is running and reaches the selected Humidity Setpoint, the unit will wait at least 15 minutes before turning back on. This is to avoid the unit turning on and off too quickly.

9.2 Set the Fan Mode



Pressing the Fan button alternates the fan running only with the compressor (AUTO Mode) and the fan always running (ON Mode). To change the mode press the Fan button. The light above the fan button will illuminate and the display will show the mode currently selected. "On" on the display means always on mode. "Au" on the display means auto mode. Press the fan button again to switch the fan mode. Once the light above the fan button turns off the fan mode will be set.



9.3 Air Sampling

When operating in Internal Control Mode, the dehumidifier will turn on the fan in order sample the air.

If the relative humidity of the air at the on-board sensor is reading below the Humidity Setpoint, the dehumidifier will turn the fan on for 1 minute every 60 minutes. After running the fan for 1 minute and the relative humidity of the air is still below the RH setpoint, the fan will turn off. The dehumidifier will sample the air again in 60 minutes.

If the relative humidity at the onboard sensor is reading above the Humidity Setpoint, the fan will turn on for 1 minute. If after 1 minute the relative humidity of the air is still above the Humidity Setpoint, the unit will start dehumidifying. If the relative humidity of the air at the onboard sensor is below the Humidity Setpoint after 1 minute, the fan will turn off. The unit will turn the fan on again in 15 minutes and remeasure the relative humidity.

9.4 Dew Point Cut Out

If the dew point is below 40°F at the onboard sensor the unit will stop dehumidifying. When dew point cut out is engaged, the fan will continue to operate based on the fan mode that is selected. Dew Point Cut Out is designed to protect the dehumidifier as well as turn the unit off when the total moisture in the air is too low. E2 will be displayed until the dew point rises above 40F.

NOTE: It is possible for the relative humidity of the air to be above the Humidity Setpoint on the unit but the dew point is below 40F. In this scenario the unit will turn the fan on every 15 minutes for one minute and measure the dew point. Once the dew point rises above 40F and the humidity is above the Humidity Setpoint the unit will resume normal operation.

9.5 Temperature Cut Out

If the temperature of the air is above 120F or below 40F the unit will not dehumidify. The unit will turn the fan on for one minute, every 15 minutes and measure the temperature. Once the temperature is above 40F or below 120F the unit will resume normal operation.

9.6 Defrost Protection



When ice is detected on the coils the unit will enter defrost mode. When this is activated the light over the snowflake will light up. The fan will be on, and the compressor will be off during defrost. After the coil is completely defrosted, the unit will continue normal operation.

9.7 Filter Reset



The Filter Reset button will light up after the fan has been running for 2,000 hours. After changing the filter, press and hold the filter reset button to reset the 2,000-hour timer. Light flashes while button is held.

9.8 External Control Mode



To control the unit using the terminal block, press the Terminal Control button. The display will show "tc."

This mode must be activated when an external control is used to control the dehumidifier. When Terminal Control is active, the internal RH sensor is disabled.



9.9 Terminal Block Layout

To control the unit using the terminal block, press the Terminal Control button. The display will show "tc."

This mode must be activated when an external control is used to control the dehumidifier. When Terminal Control is active, the internal RH sensor is disabled.

Terminal Block Control Operations:

DEHUM: Dehumidification (Fan and Compressor) Control Input.

24VAC (10VA MAX): Transformer High Side Output to External Control.

Fan: Fan Control Input.

24V COM: 24VAC Power Transformer Neutral Side Output to External Control.

FLOAT: External Low Voltage Float Switch or Water Sensor Input (Use Normally Closed Switch).


FLOAT: External Low Voltage Float Switch or Water Sensor Input (Use Normally Closed Switch).

Alarm: Normally closed contact that opens if internal error is detected.

Alarm: Normally closed contact that opens if internal error is detected.

NOTE: Alarm terminals are used to interface with a remote alarm or building automation system. The terminals switch when the unit has a malfunction and are factory set to "normally closed" but can be changed to "normally open".

NOTE: The V205 is not compatible with the Santa-Fe SmartAire remote sensor

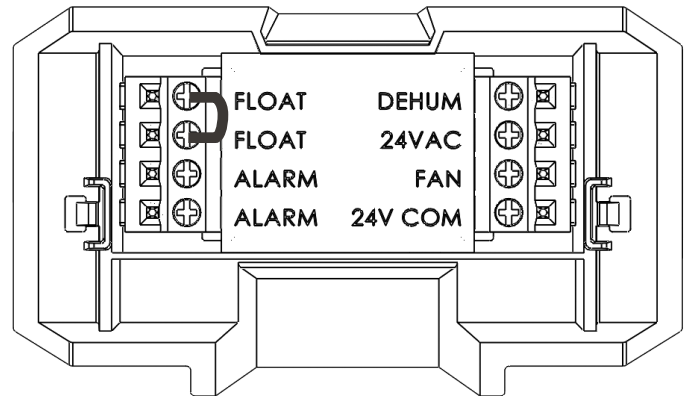

Backside of Terminal Cap

9.10 Float Switch Cutout

The terminal block is shipped with a jumper wire between the two FLOAT terminals. This jumper wire must stay in place unless a normally closed float switch is installed using these two terminals. See section 11.2 for error codes.

9.11 Fan Control

The fan can be called by an external controller for ventilation or air circulating by connecting the 24V AC dry contact to FAN. For other controller specific wiring, please reference the install instructions provided with the controller.

9.12 DEHU Control

The unit can be called to dehumidify by closing the 24V AC to DEHU. The fan will circulate air for 1 minute before starting to dehumidify.

9. CONTROLS




9.13 External Controller Options

Santa-Fe offers several external control options such as the Ultra DEH3000, Ultra DEH3000R and Honeywell Humidipro. These external controls are sold separately. This unit can also be controlled by any 24 Volt AC dry contact, normally open signal.


4028539 / 4028407

DEH 3000 / DEH 3000R Wiring Diagram

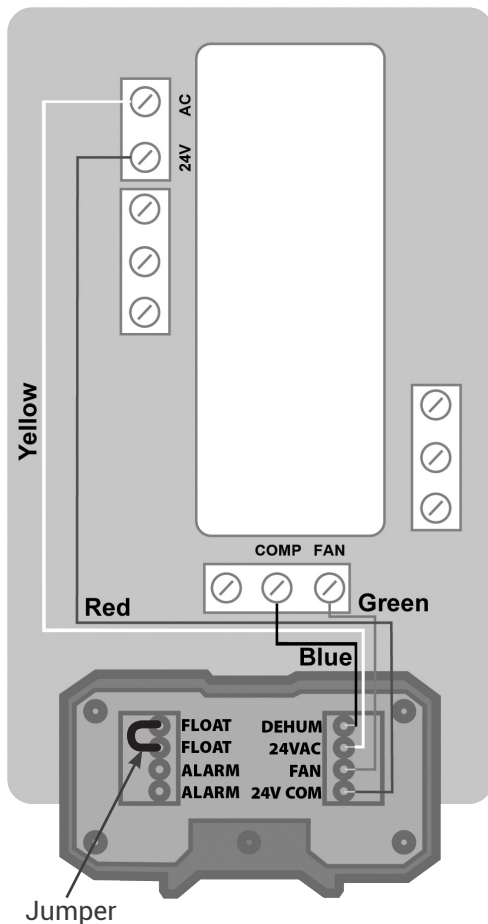

4041649

Honeywell Humidipro Wiring Diagram

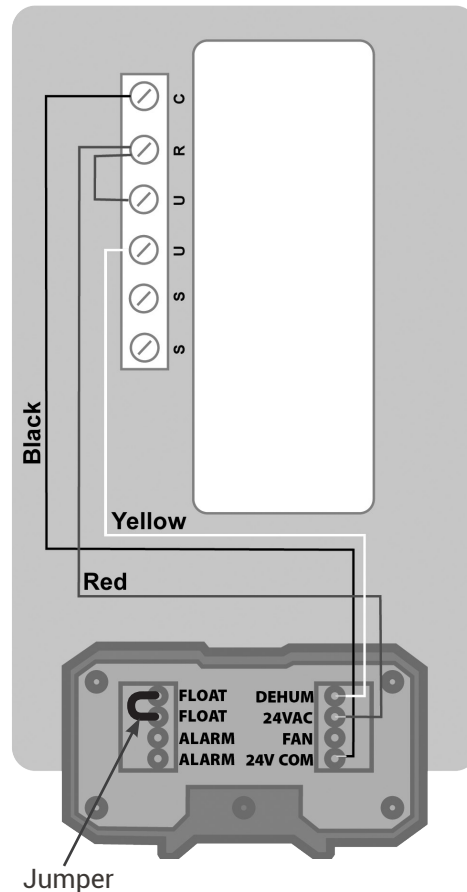

9.14 On Board Power

This unit has an internal power transformer that can supply 24V AC power. This power is used to power the onboard controls as well as any external accessories. 30 Watts of 24V AC power is available through the terminal block. This should accommodate up to two power dampers. See power requirements of dampers used prior to install.

10. AIR FILTRATION



The Santa-Fe Ultra V205 is equipped with a MERV-13 air filter. The filter should be checked and replaced every three to six months. Operating the unit with a dirty filter will reduce dehumidifier capacity and efficiency.

DO NOT operate the unit without the recommended filter. Filter non-compliance voids the product warranty.


CAUTION!

MAKE SURE UNIT IS OFF BEFORE CHANGING THE FILTER.


Changing the Filter

For greatest filtration and efficiency of the Santa-Fe Ultra V205, it is recommended the air filter be replaced every three to six months with a Santa-Fe Certified MERV 13 rated filter.


Step 1: Remove the magnetized filter door by pulling it off of the dehumidifier. You can remove it on either side to gain access to the filter.

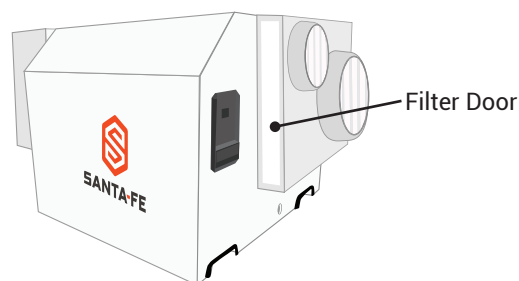


Step 2: Remove the filter by gently pulling straight out of the unit.

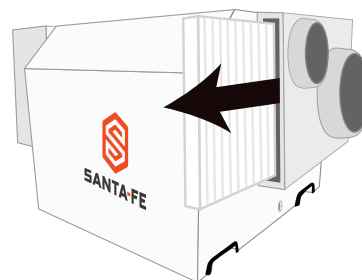

Step 3: Insert new filter by gently pushing it straight into the unit. Make sure the AIR FLOW arrow on the filter is pointing into the unit.

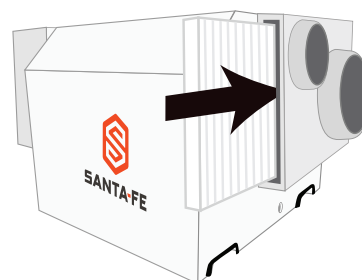

Step 4: Attach the magnetized filter door back into place, ensuring it covers the filter compartment completely.

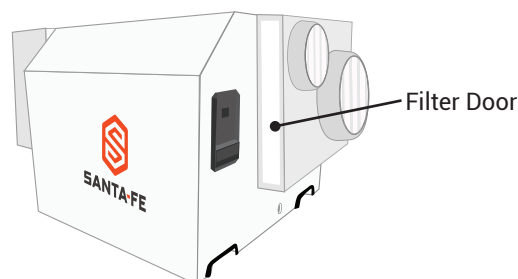

10. AIR FILTRATION



10.1 MERV Rating Chart

Standard 52.5 Minimum Efficiency Reporting Value	Dust Spot Efficiency	Arrestance	Typical Controlled Contaminant	Typical Applications and Limitations	Typical Air Filter/Cleaner Type
20	n/a	n/a	< 0.30 pm Particle Size	Cleanrooms	≥99.999% eff. On 10-20 pm Particles
19	n/a	n/a	Virus (unattached)	Radioactive Materials	Particles
18	n/a	n/a	Carbon Dust	Pharmaceutical Man.	Particulates
17	n/a	n/a	All Combustion Smoke	Carcinogenic Materials	≥99.97% eff. On 30 pm Particles
16	n/a	n/a	0.30-1.0 pm Particle Size	General Surgery	Bag Filter - Nonsupported
15	>95%	n/a	All Bacteria	Hospital Inpatient Care	Micro Fine Fiberglass or Synthetic media, 12-36 in. Deep, 6-12 Pockets
14	90-95%	>98%	Most Tobacco Smoke	Smoking Lounges	Box Filter - Rigid Style Cartridge
13	89-90%	>98%	Proplet Nuceli (Sneeze)	Superior Commercial Buildings	Filters 6 to 12 in. Deep, May Use Lofted or Paper Media
12	70-75%	>95%	1.0-3.0 pm Particle Size Legionella	Superior Residential	Bag Filter - Nonsupported
11	60-65%	>95%	Humidifier Dust Lead Dust	Better Commercial Buildings	Micro Fine Fiberglass or Synthetic media, 12-36 in. Deep, 6-12 Pockets
10	50-55%	>95%	Milled Flour		Box Filter - Rigid Style Cartridge
9	40-45%	>90%	Welding Fumes	Hospital Laboratories	Filters 6 to 12 in. Deep, May Use Lofted or Paper Media
8	30-35%	>90%	3.0-10.0 pm Particle Size	Commercial Buildings	Pleated Filters - Disposable, Extended Surface Area, Thick with Cotton-Polyester Blend Media, Cardboard Frame
7	25-30%	>90%	Mold Spores Hair Spray	Better Residential	Cartridge Filters - Graded Density Viscous Coated Cube or Pocket Filters, Synthetic Media
6	<20%	85-90%	Fabric Protector Dusting Aids		Throwaway - Disposable Synthetic Panel Filter
5	<20%	80-85%	Cement Dust Putting Mix	Paint Booth Inlet	
4	<20%	75-80%	>10.0 pm Particle Size Pollen	Minimal Filtration	Throwaway - Disposable Synthetic Panel Filter
3	<20%	70-75%	Dust Mites Standing Dust	Residential	Washable - Aluminum Mesh
2	<20%	65-70%	Spray Paint Dust		
1	<20%	<65%	Textile Fibers Carpet Fibers	Window A/C Units	Electrostatic - Self Charging Woven Panel Filter

Table Data Source: United States Environmental Protection Agency



WARNING!

SERVICING THE DEHUMIDIFIER WITH ITS HIGH PRESSURE REFRIGERANT SYSTEM AND HIGH VOLTAGE CIRCUITRY PRESENTS A HEALTH HAZARD WHICH COULD RESULT IN DEATH, SERIOUS BODILY INJURY, AND/OR PROPERTY DAMAGE. ONLY QUALIFIED SERVICE PEOPLE SHOULD SERVICE THIS UNIT.

11.1 Warranty

A warranty certificate has been enclosed in this manual; read it before any repair is initiated. If a warranty repair is required, call the factory first at 1-800-334-6011 for warranty claim authorization and technical assistance.

11.2 Technical Description

The dehumidifier uses a refrigeration system similar to an air conditioner's to remove heat and moisture from incoming air, and add heat to the air that is discharged.

Hot, high-pressure refrigerant gas is routed from the compressor to the condenser coil. The refrigerant is cooled and condensed by giving up its heat to the air that is about to be discharged from the unit. The refrigerant liquid then passes through a filter/drier and expansion device which causes the refrigerant pressure and temperature to drop. It next enters the evaporator coil where it absorbs heat from the incoming air and evaporates. The evaporator operates in a flooded condition, which means that all the evaporator tubes contain liquid refrigerant during normal operation. A flooded evaporator should maintain nearly constant pressure and temperature across the entire coil, from inlet to outlet.

The compressor collects the cool refrigerant gas and compresses it to a high pressure and temperature to repeat the process.

11.3 Service Personnel

Only qualified HVAC or electrical contractors are allowed to conduct maintenance, service and/or repair operations on the dehumidifier. Examples include but are not limited to breaking into the refrigerating circuit, opening of sealed components, and/or opening of ventilated enclosures.

- Prior to beginning work on the dehumidifier, safety checks are necessary to ensure that the risk of ignition is minimized.
- For repair to the REFRIGERATING SYSTEM, a qualified contractor should first establish a controlled procedure so as to minimize the risk of a flammable gas or vapor being present while the work is being performed
- All maintenance staff and others working in the local area shall be instructed on the nature of work being carried out. Work in confined spaces shall be avoided.
- The area shall be checked with an appropriate refrigerant detector prior to and during work, to ensure the technician is aware of potentially toxic or flammable atmospheres. Ensure that the leak detection equipment being used is suitable for use with all applicable refrigerants, i.e. non-sparking, adequately sealed or intrinsically safe.
- If any hot work is to be conducted on the refrigerating equipment or any associated parts, appropriate fire extinguishing equipment shall be available to hand. Have a dry powder or CO2 fire extinguisher adjacent to the charging area.
- No person carrying out work in relation to a REFRIGERATING SYSTEM which involves exposing any pipe work shall use any sources of ignition in such a manner that it may lead to the risk of fire or explosion. All possible ignition sources, including cigarette smoking, should be kept sufficiently far away from the site of installation, repairing, removing and disposal, during which refrigerant can possibly be released to the surrounding space. Prior to work taking place, the area around the equipment is to be surveyed to make sure that there are no flammable hazards or ignition risks. "No Smoking" signs shall be displayed.
- Ensure that the area is in the open or that it is adequately ventilated before breaking into the system or conducting any hot work. A degree of ventilation shall continue during the period that the work is carried out. The ventilation should safely disperse any released refrigerant and preferably expel it externally into the atmosphere.

11. SERVICE



The following checks shall be applied to installations using FLAMMABLE REFRIGERANTS:

- Where electrical components are being changed, they shall be fit for the purpose and to the correct specification. At all times Santa-Fe's maintenance and service guidelines shall be followed. If in doubt, consult Santa-Fe's technical department for assistance.
- The actual REFRIGERANT CHARGE is in accordance with the room size within which the refrigerant containing parts are installed;
- The ventilation machinery and outlets are operating adequately and are not obstructed;
- Marking to the equipment continues to be visible and legible. Markings and signs that are illegible shall be corrected;
- Dehumidifiers are installed in a position where they are unlikely to be exposed to any substance which may corrode refrigerant containing components, unless the components are constructed of materials which are inherently resistant to being corroded or are suitably protected against being so corroded.

11.4 Checks to Electrical Devices

Repair and maintenance to electrical components shall include initial safety checks and component inspection procedures. If a fault exists that could compromise safety, then no electrical supply shall be connected to the circuit until it is satisfactorily dealt with. If the fault cannot be corrected immediately but it is necessary to continue operation, an adequate temporary solution shall be used. This shall be reported to the owner of the equipment so all parties are advised.

Initial safety checks shall include:

- that capacitors are discharged: this shall be done in a safe manner to avoid possibility of sparking;
- that no live electrical components and wiring are exposed while charging, recovering or purging the system;
- that there is continuity of earth bonding;

11.5 Sealed Electrical Components Shall Be Replaced

- During repairs to sealed components, all electrical supplies shall be disconnected from the equipment being worked upon prior to any removal of sealed covers, etc. If it is absolutely necessary to have an electrical supply to equipment during servicing, then a permanently operating form of leak detection shall be located at the most critical point to warn of a potentially hazardous situation.
- Particular attention shall be paid to the following to ensure that by working on electrical components, the casing is not altered in such a way that the level of protection is affected. This shall include damage to cables, excessive number of connections, terminals not made to original specification, damage to seals, incorrect fitting of glands, etc.
- Ensure that the equipment is mounted securely.
- Ensure that seals or sealing materials have not degraded to the point that they no longer serve the purpose of preventing the ingress of flammable atmospheres.
- Replacement parts shall be in accordance with Santa-Fe specifications.

11.6 Intrinsically Safe Components Must Be Replaced

- Do not apply any permanent inductive or capacitance loads to the circuit without ensuring that this will not exceed the permissible voltage and current permitted for the equipment in use.
- Intrinsically safe components are the only types that can be worked on while live in the presence of a flammable atmosphere. The test apparatus shall be at the correct rating.
- Replace components only with parts specified by Santa-Fe. Other parts may result in the ignition of refrigerant in the atmosphere from a leak.

NOTE: The use of silicon sealant can inhibit the effectiveness of some types of leak detection equipment. Intrinsically safe components do not have to be isolated prior to working on them.

Check that cabling will not be subject to wear, corrosion, excessive pressure, vibration, sharp edges or any other adverse environmental effects. The check shall also take into account the effects of aging or continual vibration from sources such as compressors or fans.



11.7 Detection of Flammable Refrigerants

Under no circumstances shall potential sources of ignition be used in the searching for or detection of refrigerant leaks. A halide torch (or any other detector using a naked flame) shall not be used.

The following leak detection methods are deemed acceptable for all refrigerant systems:

- Electronic leak detectors may be used to detect refrigerant leaks but, in the case of FLAMMABLE REFRIGERANTS, the sensitivity may not be adequate, or may need re-calibration. (Detection equipment shall be calibrated in a refrigerant-free area.) Ensure that the detector is not a potential source of ignition and is suitable for the refrigerant used. Leak detection equipment shall be set at 25% LFL of the refrigerant and shall be calibrated to 454B.
- Leak detection fluids are also suitable for use with most refrigerants but the use of detergents containing chlorine shall be avoided as the chlorine may react with the refrigerant and corrode the copper pipe.

NOTE: Examples of leak detection fluids are:

- bubble method
- fluorescent method agents.
- If a leak is suspected, all open flames shall be removed/extinguished.

If a leakage of refrigerant is found which requires brazing, all of the refrigerant shall be recovered from the system, or isolated (by means of shut off valves) in a part of the system remote from the leak. Removal of refrigerant shall be according to Clause DD.9 of 60335-2-40.

11.8 Refrigerant Removal and Evacuation

When breaking into the refrigerant circuit to make repairs – or for any other purpose – conventional procedures shall be used. However, for FLAMMABLE REFRIGERANTS it is important that best practice is followed since flammability is a consideration. The following procedure shall be adhered to:

- Safely remove refrigerant following local and national regulations.
- The REFRIGERANT CHARGE shall be recovered into the correct recovery cylinders if venting is not allowed by local and national codes.
- For appliances containing flammable refrigerants, the system shall be purged with oxygen-free nitrogen to render the appliance safe for flammable refrigerants.
- This process might need to be repeated several times. Compressed air or oxygen shall not be used for purging refrigerant systems.
- When the final oxygen-free nitrogen charge is used, the system shall be vented down to atmospheric pressure to enable work to take place.
- Open the circuit by cutting or brazing.
- Ensure that the outlet for the vacuum pump is not close to any POTENTIAL IGNITION SOURCES and that ventilation is available.

11.9 Charging Procedures

In addition to conventional charging procedures, the following requirements shall be followed:

- Ensure that contamination of different refrigerants does not occur when using charging equipment. Hoses or lines shall be as short as possible to minimize the amount of refrigerant contained in them.
- Cylinders shall be kept in an appropriate position according to the instructions.
- Ensure that the REFRIGERATING SYSTEM is grounded prior to charging the system with refrigerant.
- Label the system when charging is complete (if not already).
- Extreme care shall be taken not to overfill the REFRIGERATING SYSTEM.
- Prior to recharging the system, it shall be pressure-tested with the appropriate purging gas. The system shall be leak-tested on completion of charging but prior to commissioning. A follow up leak test shall be carried out prior to leaving the site.



11.10 Decommissioning

Before carrying out this procedure, it is essential that the technician is completely familiar with the equipment and all its details. It is recommended good practice that all refrigerants are recovered safely. Prior to the task being carried out, an oil and refrigerant sample shall be taken in case analysis is required prior to re-use of recovered refrigerant. It is essential that electrical power is available before the task commences.

- Become familiar with the equipment and its operation.
- Isolate system electrically.

Before attempting the procedure, ensure that:

- mechanical handling equipment is available, if required, for handling refrigerant cylinders;
 - all personal protective equipment is available and being used correctly;
 - the recovery process is supervised at all times by a competent person;
 - recovery equipment and cylinders conform to the appropriate standards.
- Pump down refrigerant system, if possible.
 - If a vacuum is not possible, make a manifold so that refrigerant can be removed from various parts of the system.
 - Make sure that cylinder is situated on the scales before recovery takes place.
 - Start the recovery machine and operate in accordance with instructions.
 - Do not overfill cylinders (no more than 80 % volume liquid charge).
 - Do not exceed the maximum working pressure of the cylinder, even temporarily.
 - When the cylinders have been filled correctly and the process completed, make sure that the cylinders and the equipment are removed from site promptly and all isolation valves on the equipment are closed off.
 - Recovered refrigerant shall not be charged into another REFRIGERATING SYSTEM unless it has been cleaned and checked.

11.11 Labelling Decommission Machines

Equipment shall be labelled stating that it has been de-commissioned and emptied of refrigerant. The label shall be dated and signed. For appliances containing FLAMMABLE REFRIGERANTS, ensure that there are labels on the equipment stating the equipment contains FLAMMABLE REFRIGERANT.

11.12 Refrigerant Recovery

- When removing refrigerant from a system, either for servicing or decommissioning, it is recommended good practice that all refrigerants are removed safely.
- When transferring refrigerant into cylinders, ensure that only appropriate refrigerant recovery cylinders are employed. Ensure that the correct number of cylinders for holding the total system charge is available. All cylinders to be used are designated for the recovered refrigerant and labelled for that refrigerant (i.e. special cylinders for the recovery of refrigerant). Cylinders shall be complete with pressure-relief valve and associated shut-off valves in good working order. Empty recovery cylinders are evacuated and, if possible, cooled before recovery occurs.
- The recovery equipment shall be in good working order with a set of instructions concerning the equipment that is at hand and shall be suitable for the recovery of all appropriate refrigerants including, when applicable, FLAMMABLE REFRIGERANTS. In addition, a set of calibrated weighing scales shall be available and in good working order. Hoses shall be complete with leak-free disconnect couplings and in good condition. Before using the recovery machine, check that it is in satisfactory working order, has been properly maintained and that any associated electrical components are sealed to prevent ignition in the event of a refrigerant release. Consult manufacturer if in doubt.
- The recovered refrigerant shall be returned to the refrigerant supplier in the correct recovery cylinder, and the relevant waste transfer note arranged. Do not mix refrigerants in recovery units and especially not in cylinders.
- If compressors or compressor oils are to be removed, ensure that they have been evacuated to an acceptable level to make certain that FLAMMABLE REFRIGERANT does not remain within the lubricant. The evacuation process shall be carried out prior to returning the compressor to the suppliers. Only electric heating to the compressor body shall be employed to accelerate this process. When oil is drained from a system, it shall be carried out safely.

11. SERVICE

11.13 Error Codes **CAUTION!** TROUBLESHOOTING SHOULD BE PERFORMED BY A QUALIFIED HVAC TECHNICIAN.

Display Code	Error Name	Possible Reason	Troubleshooting Procedure	Service Required
E1	Ambient sensor	<ol style="list-style-type: none"> Defective sensor Unplugged sensor 	<ul style="list-style-type: none"> Dehumidifier fan will circulate air for 1 minute. Dehumidifier compressor will activate for 15 minutes. This process will repeat every 15 minutes. 	No
E2	Low dew point	<ol style="list-style-type: none"> Sensor reading incoming air dew point is under 40°F Off calibration Humidity/Temp sensor 	<ul style="list-style-type: none"> Dehumidifier will circulate air for 50 seconds every 15 minutes. Dehumidifier will not operate until incoming air dew point reads above 40°F. 	No
E3	Low refrigerant	Evaporator coil temp is too high, during extended operation	Dehumidifier will go into lock-out mode for 1 hour and then attempt to activate compressor.	Yes
E4	Float switch	<ol style="list-style-type: none"> Tripped float switch 24V is shorted to Common Terminal block unplugged from unit 	The compressor and fan in the dehumidifier will remain off until the connection is fixed or the water event that activated the switch is resolved.	Yes
E5	Coil temperature sensor	<ol style="list-style-type: none"> Defective sensor Loose connection 	<ul style="list-style-type: none"> Dehumidifier will go into lock-out mode for 1 hour and then activate compressor for 15 minutes. After the compressor runs for 15 minutes, the unit will go into defrost mode for 30 minutes. This process will repeat. 	No
E6	Temperature too high	Sensor reading incoming air temp is over 120°F	<ul style="list-style-type: none"> Dehumidifier will circulate air for 15 minutes every hour. Dehumidifier will not operate until incoming air temp sensor reads below 120°F 	No
E7	Temperature too low	Sensor reading incoming air temp is under 40°F	<ul style="list-style-type: none"> Dehumidifier will circulate air for 50 seconds every 15 minutes. Dehumidifier will not operate until incoming air temp reads above 40°F. 	No
E8	Communication from power board is not being received	<ol style="list-style-type: none"> There is a cable connection issue Defective power board 	The power board will continue to run unit using the last settings but changes to operation cannot be made until communication is restored.	Yes, only if operational changes are required
E9	Over pressure refrigeration system	<ol style="list-style-type: none"> High pressure sensor has tripped due to excess pressure in the refrigeration system Incoming air temp is too high 	Power board will be in system protection mode.	Yes, only if the error persists when operating below 90°F incoming air

12. LIMITED WARRANTY



Terms of Coverage

Your Santa-Fe™ Dehumidifier is expressly warranted to be free from defects in materials or workmanship for five (5) years from date of purchase and the product's components will be free of defects in workmanship or materials for a period of six (6) years following the date of purchase.

What Is Covered

The exclusive obligation of Santa-Fe under this Limited Warranty shall be, at the sole discretion of Santa-Fe, to supply, without charge, a replacement for any component or product which is found to be defective. A defective part will be replaced pursuant to this Limited Warranty with a genuine Santa-Fe part. A defective product will be replaced pursuant to this Limited Warranty with a new Santa-Fe product of equal or similar features and functionality if the original product has been discontinued or is no longer available.

Not Covered by the Limited Warranty

- Consumable or maintenance products, such as, but not limited to Air Filters.
- Products purchased from third parties that were previously used, such as previously used products purchased from eBay, similar third party/auction sites, or individuals selling used products.
- Labor charges, shipping costs, removal fees, service fees, or reinstallation costs.
- Materials furnished by the installer.
- Damage caused by misuse, abuse, improper installation, or failing to install, use, or maintain the product in accordance with the instructions provided.
- Damage to HVAC equipment caused by improper installation(s) or misapplication installation(s).
- Modifications, changes, repurposing, or alterations to the Santa-Fe product.
- Extended warranties or satisfaction guarantees offered by third parties.
- Cosmetic damage or normal wear and tear, including, but not limited to: scratches, peeling finish, or dents that do not impede the mechanical functionality of the product.
- Damage caused by acts of nature, including but not limited to: fire, collision, flood, wind, power surge, lightning strike, or mold.
- Damage caused during transit.
- Damage caused during installation due to failure to follow local, state, or federal laws, statutes, codes, or ordinances.
- Damage caused by defects in materials furnished by the installer.

Limit of Liability

IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE SHALL BE LIMITED IN DURATION TO THE AFOREMENTIONED EXPRESS WARRANTY PERIOD. SANTA-FE LIABILITY FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES, OTHER THAN DAMAGES FOR PERSONAL INJURIES, RESULTING FROM ANY BREACH OF THE AFOREMENTIONED IMPLIED WARRANTIES OR THE ABOVE LIMITED WARRANTY IS EXPRESSLY EXCLUDED. THIS LIMITED WARRANTY IS VOID IF DEFECT(S) RESULT(S) FROM FAILURE TO INSTALL THE PRODUCT ACCORDING TO THE INSTALLATION INSTRUCTIONS. IF THE LIMITED WARRANTY IS VOID DUE TO MISAPPLICATION OR IMPROPER INSTALLATION, ALL DISCLAIMERS OF IMPLIED WARRANTIES SHALL BE EFFECTIVE UPON INSTALLATION.

If a Product or component is replaced while under warranty, the applicable limited warranty period shall not be extended beyond the original warranty time period.

Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so the above limitation(s) may not apply to your situation. This Limited Warranty gives you specific legal rights, and you may also have other rights which vary from state to state.



IMPORTANT WARRANTY INFORMATION - DO NOT DISCARD

REGISTER YOUR PRODUCT.

WARRANTY

WARRANTY

SERIAL
NUMBER ▶

PART
NUMBER ▶

www.santa-fe-products.com/product-registration

**Register your product using the serial
number and part number above at
www.santa-fe-products.com/product-registration**

**This is important
Warranty Information.
Please DO NOT DISCARD!**

Santa-Fe-Products.com
(888) 277-4524

