

Duct Kit

Part No. 4042275

Parts Included:

1. Supply Duct Plenum
2. Packed Fasteners (x4)


Tools Required:

1. Portable Drill
2. T25 Torx Driver
3. 5/16" Hex Driver



⚠ CAUTION! Before installing duct kit, disconnect dehumidifier from electrical power and disconnect duct work if previously installed.

Step 1: Using T25 Torx Driver, unthread #10-24 screws on the top panel (x1), rear panel (x1), and left panel (x2) halfway.

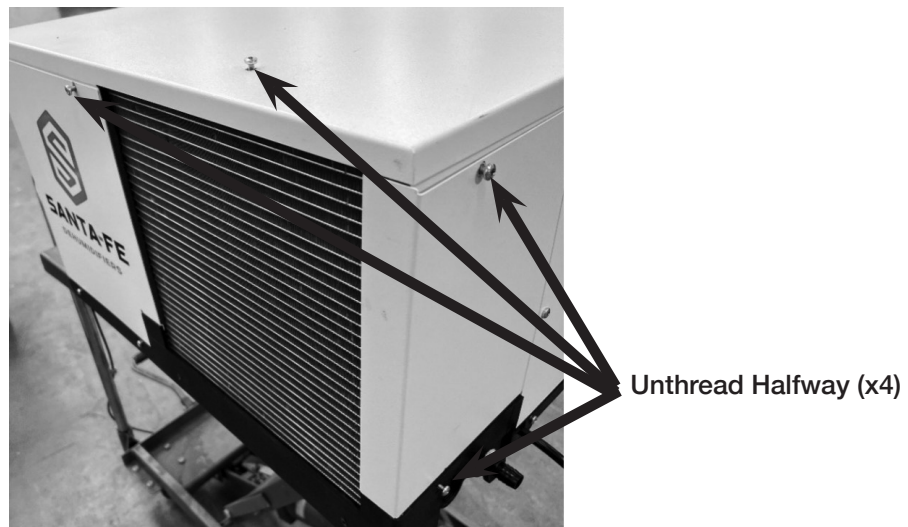

Therma-Stor LLC

Driven by performance. Powered by design.™


4201 Lien Rd Madison, WI 53704 • TOLL-FREE 1-800-533-7533 • www.thermastor.com • sales@thermastor.com

TS-1185 10/22 Rev A

Step 2: Install supply duct plenum on the dehumidifier by slotting half-threaded screws in the keyed grooves (x4). Ensure screws are pushed all the way into the grooves.



Step 3: Using T25 Torx Driver, tighten #10-24 screws on the top panel (x1), rear panel (x1), and left panel (x2). Ensure screws are securely fastened.

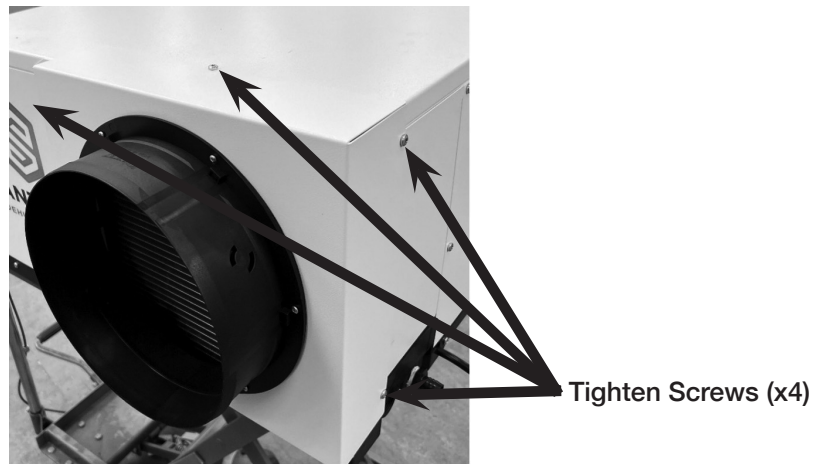

Step 4: Locate packed fasteners. Using 5/16" Hex Driver, drill fasteners (x2) through bottom holes of the supply duct plenum into plastic base. Ensure screws are securely fastened.



Note: Packed fasteners are self-drilling. No need for pilot holes. Packed parts have x2 additional fasteners that are unneeded.



Therma-Stor LLC

Driven by performance. Powered by design.™

4201 Lien Rd Madison, WI 53704 • TOLL-FREE 1-800-533-7533 • www.thermastor.com • sales@thermastor.com

TS-1185 10/22 Rev A