



Therma-Stor Products


PO Box 8050
Madison, WI 53708
(800) 533-7533
(608) 222-1447

www.thermastor.com
sales@thermastor.com

DEH 2000 Field Calibration

Make sure instrument used to calibrate control is accurate before attempting recalibration.

1. With controller facing you, open the cover and flip it up.
2. Look for 2 small blue trimmers on the lower part of the controller, left center.

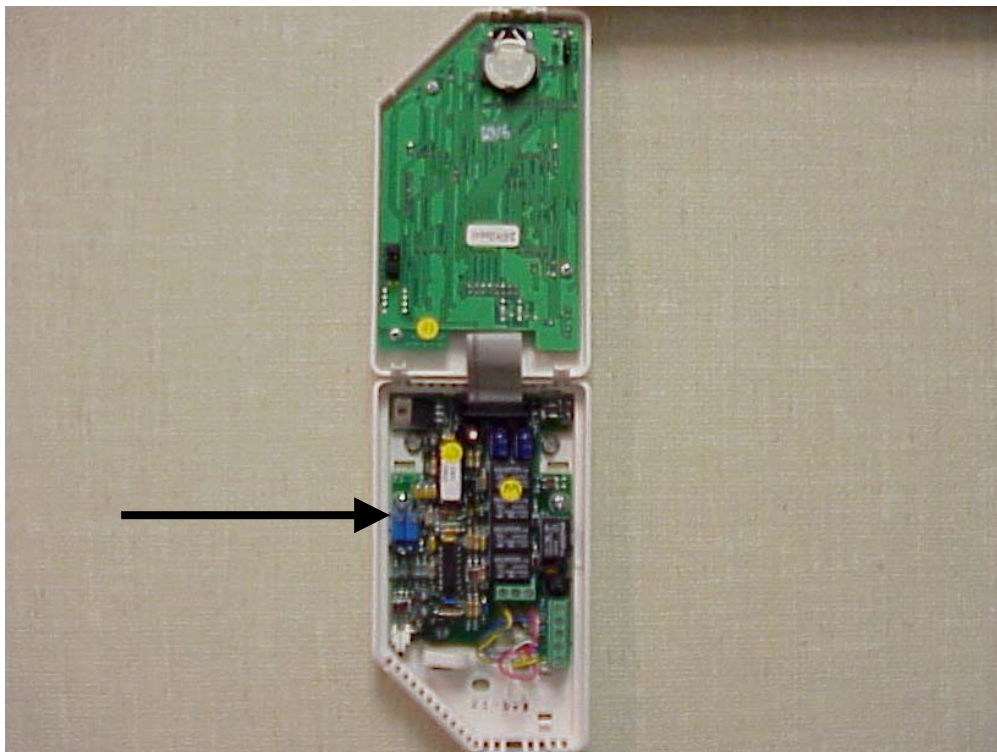

3. To calibrate humidity, use only the left trimmer (R9). Turning clockwise will increase humidity. Only calibrate to an accurate meter!

